



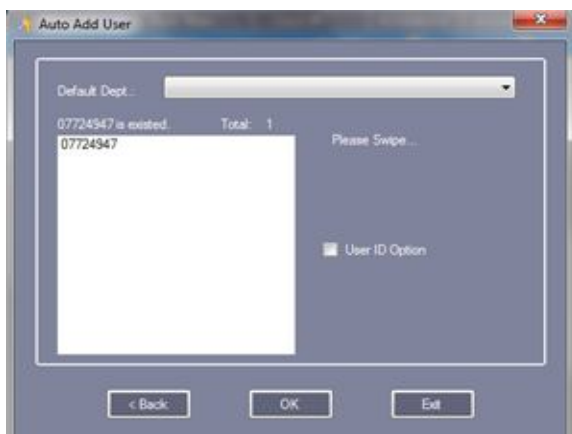

NF-K101 USB Issuing Card Device

Auto Add RFID card of Keyfob to software

Click "Configuration"—"Personal"—"Auto Add"—Check USB Reader Then click next and Put Card or Keyfob on the reader.

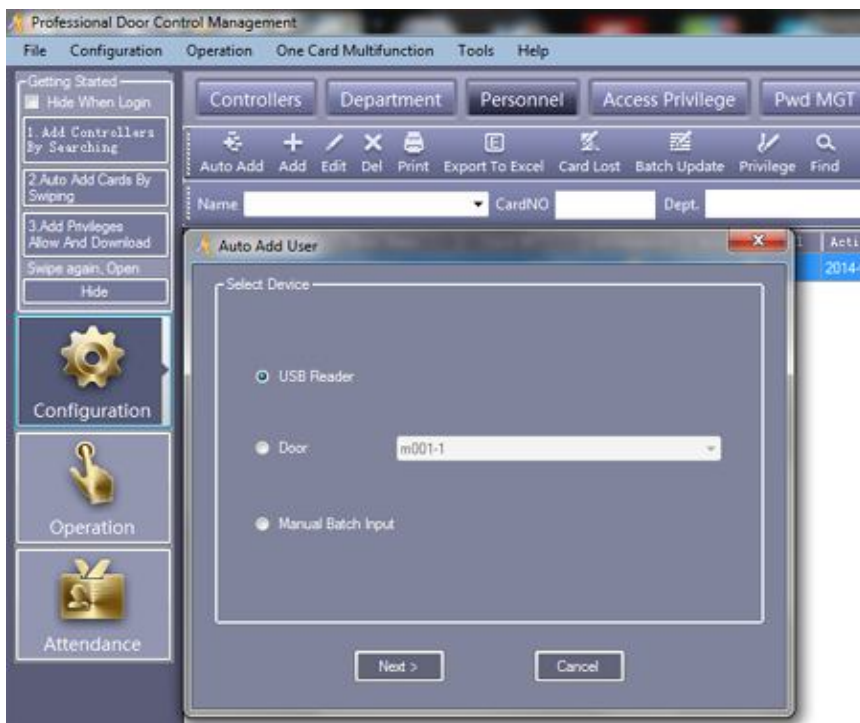

You still can add RFID card or Key fob number manually

Brief introduction of product:

Connect USB data wire between Device and PC, after 30 seconds system testing period, then punch the card, and execute the following steps in

PC: Start----Program----Accessories----Notepad.

Card Number will be showed on Screen automatically Lines (No need press “Enter” for it) .

Features & Benefits:

DC 5V working Voltage or Power on USB

Less 100mA Working Current

Support Windows XP/Vista/W7

Dimension: : 140Lx100WX30H(mm)

5- 10cm Proximity Reading Range

Support EM/ID (125 KHz Frequency)

Standard PC USB Communication Interface

Champagne or Black Color

-10 to+ 70 C Ambient Temperature