

SA-600 Standalone Access Control User Menu

1. Default Master Program code : [999999]
2. Change Master Program code : Press [*] + [999999] [#] Light change to RED, Press [0] Light change to Green + [New 6 digits program code] + [#] [Repeat 6 digits program code] + [#] . Light change to red. Then Press [*] light change to blink Red.
3. Set Up Door Open Mode :
 - 3.1 : Card Open
Press [*] + [Program code] [#] Light change to RED, Press 30 [#]. Press [*] light change to blink Red.
 - 3.2 : Card + Password Open
Press [*] + [Program code] [#] Light change to RED, Press 31 [#]. Press [*] light change to blink Red.
 - 3.3 : Card Or Password Open (Factory default)
Press [*] + [Program code] [#] Light change to RED, Press 32 [#]. Press [*] light change to blink Red.
4. How to program Card key:
 - 1). One Card Key:
Press [*] + [Program code] [#] Light change to RED , + [1] + [Reading card] + [#] , Press [*] light change to blink Red.
 - 2). Multiple Card Key:
Press [*] + [Program code] [#] Light change to RED , + [1] + [Reading card , Reading card , One by one] + [#] , Press [*] light change to blink Red.
The Card index# will be added automatically . The Ranges of Card index is from 1-2000.
Or You can program the card key by index#:
Press [*] + [Program code] [#] Light change to RED , + [1] + [Index# (0010 to 2000) [#], Reading card . Index# (0011 to 2000) [#], Reading card , One by one] + [#] , Press [*] light change to blink Red.

Note:
Please make a record of card index . like John = 0010 , Sam = 0011.....
In case someone lost their card or quit. You can use this index to delete it.
5. How to delete the card key?
 - 1). Press [*] + [Program code] [#] Light change to RED , + [2] + [Reading card , Reading card , One by one] + [#] Press [*] light change to blink Red.
 - 2). Delete by Index#:
Press [*] + [Program code] [#] Light change to RED , + [2] + [Index# [#] , Index# [#] , One by one] + [#] Press [*] light change to blink Red.
 - 3). Delete All Cards and Passwords:
Press [*] + [Program code] [#] Light change to RED , 20000 [#]

6. How to program the Password: (Only 4 digits)

6.1 :

Program One Password

Press [*] + [Program code] [#] Light change to RED , + [1] + [Index# (0010 to 2000) [#] , 4 digits Password [#] , + [#] , Press [*] light change to blink Red.

6.2 :

Program multiple Passwords:

Press [*] + [Program code] [#] Light change to RED , + [1] + [Index# (0010 to 2000) [#] , 4 digits Password [#] , Index# (0011 to 2000) [#],4 digits Password [#], One by one] + [#] , Press [*] light change to blink Red.

Note:

Please make a record of index# . like John = 0010 , Sam = 0011.....

You can use this index to delete Password.

Can not use “1234” as Password

Have to use 4 digit Password + # to Open the door.

7. How to delete Password?

1). Delete by Index#:

Press [*] + [Program code] [#] Light change to RED , + [2] + Index# [#] , + [#] Press [*] light change to blink Red.

2). Delete All Cards and Passwords:

Press [*] + [Program code] [#] Light change to RED , 20000 [#]

8. Change Door Open Relay Time: (Factory default is 5 seconds)

Press [*] + [Program code] [#] Light change to RED , + [4] +[0-99 seconds]+ [#] , Press [*] light change to blink Red.

9. Alarm Time setting: (Factory default is 1 Minute)

Press [*] + [Program code] [#] Light change to RED , + [5] +[0-3 mins]+ [#] , Press [*] light change to blink Red.

10 . Stop Alarming:

Close the door or Swipe Valid card or Input master program cord .

11 . IF you have more than 2 SA-600 Standalone access control system and want to

use one card to open them, You can have same card to be programmed by other SA-600 Standalone access control system.

If you still have questions, Please feel free to contact our technical support at 626-369-7788 or Send email to : info@lockchoice.com