


# WIFI Access Control Manual

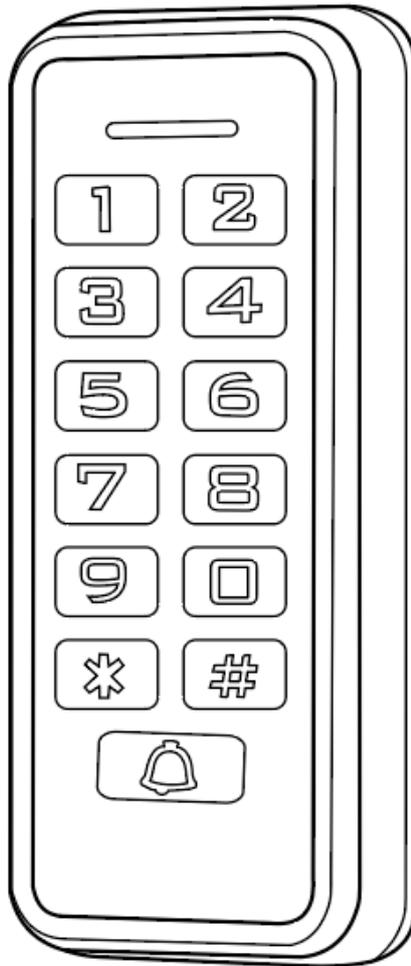

## 1 Product Introduction

The device is a WIFI access control keypad and proximity card reader, which supports EM & MF card types, it's one of the most advanced standalone access control. It adopts unique design, built-in USA Atmel microprocessor, with strong anti-interference ability, high security and reliability, powerful function and convenient operation. It's widely used in high-end buildings, residential communities and other public places.

## 2. Feature

Ultra-low power consumption: Standby current is less than 30mA

Protocol: Wiegand26 Input/Output

Searching time: Less than 0.1s after reading card

Backlight keypad: Easy to operate at night

Doorbell interface: Support external wired doorbell

Access ways: Card, code, card + code, Mobile APP

## 3. Specification

Operating Voltage: DC12-24V	Standby Current: $\leq 30\text{mA}$
Card Reading Distance: 2~5cm	Capacity: 10000 Users
Operating Temperature: $-40^{\circ}\text{C} \sim 60^{\circ}\text{C}$	Operating Humidity: 10%~90%
Lock Output Load: $\leq 3\text{A}$	Alarm Output Load: $\leq 20\text{A}$
Short-circuit Protection Output Time: $\leq 100\mu\text{S}$	Door Relay Time: 0~300s

## 4. Sound & Light Indication

Operate Status	LED Light Color	Buzzer
Standby	Red Light Solid	
Keypad		Beep
Operation Successful	Green	Beep -
Operation Failed		Beep-Beep-Beep
Entering into Programming	Red	Beep -
Programmable Status	Orange	
Exit Programming	Flash Red Slowly	Beep -
Door Opening	Green	Beep -
Alarm	Flash Red Quickly	Alarm

## 5 Programming Guide:

**Note: Program cod is not passcode .**

Function	Operation steps	Notes
Change Program code	* [Program code] # 0 [New code: 6 digits] # [New code] # * * to Exit	Factory Default Program code is 999999. The user can set factory default value if admin code is forgotten
Add card user	* [Program code] # 1 [Read card] ...# * * to Exit	Add card users continuously
Delete card user	* [Program code] # 2 [Read card] ...# * * to Exit	Delete card users continuously
Delete all user	* [Program code] # 20000 # * to Exit	Delete all codes and cards
Add public code	* [Program code] # 66 # [4-6 digits code] # * to Exit	There is only 1 public code
Delete public code	* [Program code] # 67 # [4-6 digits code] # * to Exit	
Pair to WIFI	* [Program code] # 63 # Green Light Blinking	See Another User manual of Wifi Set Up

**Note: Solid Red is standby mode . Blinking Red is Programming Mode. Green Light is input accepted.**


## 6 Advanced settings

	Add Users	Notes
1	Add card	* [Program code] # 1 [Read card] ...# * * to Exit Add card users continuously
	Add card number	* [Program code] # 1 [8 digits or 10 digits] # * * to Exit Exit Automatically generate ID number from 1 to 10000
	Add ID number + card	* [Program code] # 1 [ID number:1-10000] # [Read card] # [Read Another Card] #.....* * to Exit Add card users by specific ID number, find and delete easily .
	Add ID number + card number	* [Program code] # 1 [ID number:1-10000] # [8 digits or 10 digits] # * * to Exit Add card users by specific ID number and card number, find and delete easily.
	Add code	* [Program code] # 1 [ID number:1-10000] # [code:4-6 digits] # [Another code] #.....* * to Exit The code is any 4-6 digits, ID number is from 1-10000, code 1234 is unavailable.
2	<b>Delete Users</b>	
	Delete card	* [Program code] # 2 [Read card] # [Read Another Card] #.....* * to Exit Delete Multiple card users
	Delete card number	* [Program code] # 2 [8 digits or 10 digits] # * * to Exit Delete the card user by card number when the card is broken or get lost
	Delete ID number	* [Program code] # 2 [ID number:1-10000] # * * to Exit Delete the card user by ID number when the card is broken or get lost
	Delete ALL users	* [Program code] # 2 0000 # * to Exit Delete ALL codes, card users and public PIN code.
3	<b>Access ways</b>	
	By card only	* [Program code] # 30 # * to Exit Enter by card only, keypad is invalid
	By card + code	* [Program code] # 31 # * to Exit To enable this function, the user code has to be changed. (See step 8)
	By card or code	* [Program code] # 32 # * to Exit Enter by card or code (factory default)
4	<b>Relay Output Time</b>	
	Set door unlock time	* [Program code] # 4 [0~300] # * to Exit Time range is "0~300 sec", default 5 sec
5	Set alarm time	* [Program code] # 5 [0~99] # * to Exit Time range is "0~99 min ", default 0 min
6	<b>Door Open Detection / WIFI / Public PIN / Data backup</b>	
	Disable door contact	* [Program code] # 60 # * to Exit Not detect the door status( Default )
	Enable door contact	* [Program code] # 61 # * to Exit Detect door open or closed, and alarm is

			activated under abnormal situation
	WIFI Match	* [Program code] # 6 3 # Green Light Blinking	WIFI Match
	Add public code	* [Program code] # 6 6 # 4-6 digits # * to Exit	There is only 1 public code
	Delete public code	* [Program code] # 6 7 # * to Exit	Delete public code
	Data backup sending	* [Program code] # 6 8 # * to Exit	
	Data backup receiving	* [Program code] # 6 9 # * to Exit	
	<b>Security Mode</b>		
7	Normal mode	* [Program code] # 7 0 # * to Exit	( Default)
	Locked mode	* [Program code] # 7 1 # * to Exit	The device will be locked for 10 minutes if input 10 times invalid cards or codes continuously
	Alarm mode	* [Program code] # 7 2 # * to Exit	The device will alarm if input 10 times invalid cards or codes continuously.
8	Enable light indicator	* [Program code] # 8 0 # * to Exit	( Default)
	Disable light indicator	* [Program code] # 8 1 # * to Exit	Turn it off when the indicator is unnecessary
	Enable buzzer	* [Program code] # 8 2 # * to Exit	( Default)
	Disable buzzer	* [Program code] # 8 3 # * to Exit	Turn it off when the beeper is unnecessary
	Enable keypad backlight	* [Program code] # 8 4 # * to Exit	Keypad backlight on
	Disable keypad backlight	* [Program code] # 8 5 # * to Exit	Keypad backlight off
	Keypad backlight automatically	* [Program code] # 8 6 # * to Exit	(Factory default ) read card or press the keypad,it will be off after 10 secs.
	Standalone mode	* [Program code] # 8 7 # * to Exit	Factory default
	Relay toggle mode	* [Program code] # 8 8 # * to Exit	The door will Stay open until the user input code to lock.
	Reader mode	* [Program code] # 8 9 # * to Exit	Factory default wiegand26 output
	Reader mode	* [Program code] # 8 9 2 6 # * to Exit	Wiegand26 output
	Reader mode	* [Program code] # 8 9 3 4 # * to Exit	Wiegand34 output
		<b>Change user code ( No need to go to programming state )</b>	
	Change user code by card	* [Read card] 1234 # [New code:4-6 digits] # [New code] # * * to Exit	★ factory default code: 1234
	Change user code by ID number	* [ID number] # [Old code] # [New code:4-6 digits] # [New code] # * * to Exit	
	<b>Relieve alarm ( No need to go to programming state )</b>		
9	When external alarm or buzzer alarm,read [Valid card] or Input [Program code] # ,relieve alarm.		
	<b>Reset to factory default</b>		
10	Power off, press # or exit button, then power on, release it until heard short BEEP sound twice, then [Program] code has been reset to 999999, factory default settings are successful. ★ Reset to factory default won't delete user data		

## 7.Installation

- Remove the back cover from the keypad using the supplied special screw driver
- Drill 2 holes on the wall for the self-tapping screws and 1 hole for the cable
- Put the supplied rubber bungs to into the two holes
- Fix the back cover firmly on the wall with 2 self tapping screws
- Thread the cable through the cable hole
- Attach the keypad to the back cover. (See the figure below)

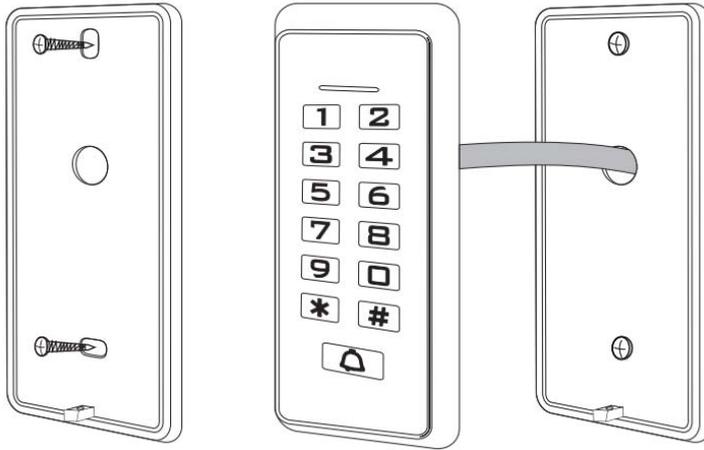


## 8. Wiring diagram

Item	Mark	Color	Function
1	BELL_A	Pink	Doorbell one end
2	BELL_B	Pink	Doorbell on the other end
3	D0	Green	Wiegand output
4	D1	White	Wiegand output
5	ALARM	Gray	Negative alarm(Positive alarm connects +12V) (Optional)
6	OPEN	Yellow	Exit button one end (On the other end connects GND)(Optional)
7	D_IN	Broun	Door contact switch one end(On the other end connects GND)(Optional)
8	DC12V	Red	Positive power supply
9	GND	Black	Negative power supply
10	NO	Blue	Relay NO end
11	COM	Purple	Relay COM end
12	NC	Orange	Relay NC end


## 9. Diagram

### 9.1 Common Power Supply

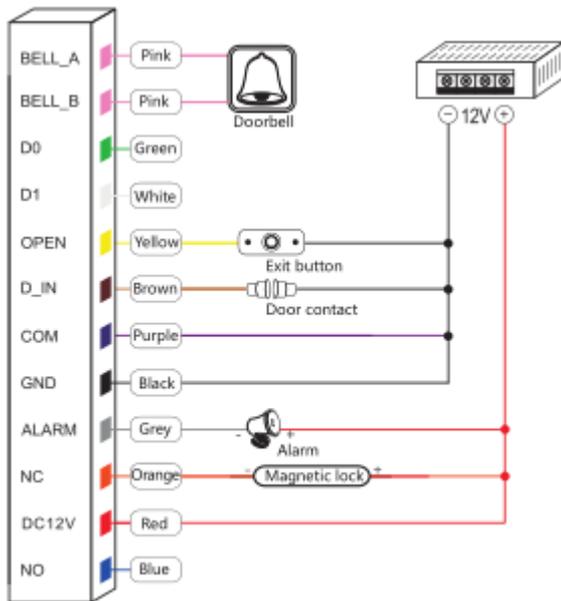

Note: The door contact and alarm function are optional

### 9.2 Special Power Supply

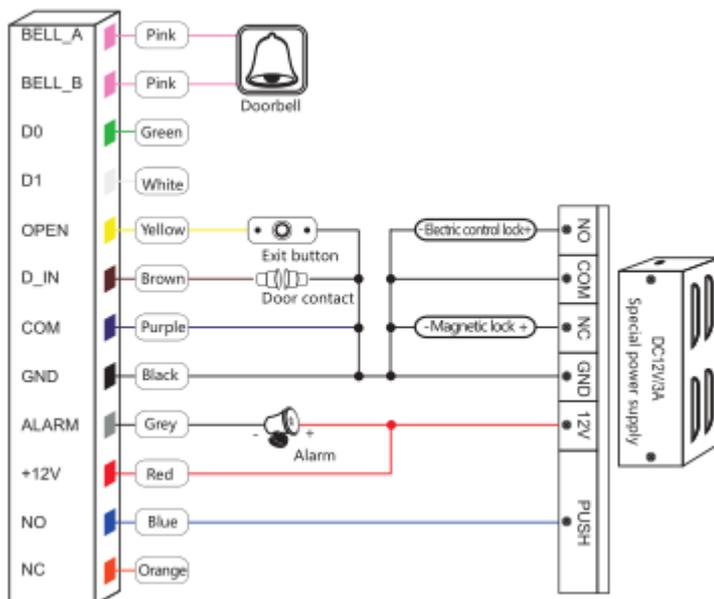

Note: The door contact and alarm function are optional

## 10. Packing List

Name	Model/Size	Quantity	Remarks
Standalone access control		1	
User manual		1	
Self tapping screws	Φ 4mm×25 mm	2	Used in fixing
Rubber plug	Φ 6mm×28 mm	2	Used in fixing
Star screw driver	Φ 20mm×60mm	1	Special for Keypad
Star screw	Φ 3mm×5mm	1	Used in fixing front cover and back cover

### Warm Tips

- \* Please don't maintain devices privately, any issues, please turn back to factory.
- \* To avoid unnecessary trouble, please check concealed wires or line pipes carefully if need to drill a hole before installation, moreover, please wear security glasses when drilling a hole or fixing wires.
- \* If upgrade, manual will be changed a little.