

BS-SK7 Wireless Keyless Keypad and Wireless Exit Button to Pair Wireless Mini Controller Instruction

Pair Wireless Keypad / Exit Button and Mini Controller

1. They are already paired when out of factory, if no problem, the users do not need to do this operation in using.
2. One Mini Controller can be connected by 5 pieces of Wireless Keypad and Exit Button maximum.

- To pair the wireless keypad and the controller:

Mini Controller: Remove the back cover, and press the button "Pair"

Wireless Keypad: * Master Code # 8 0 #, press * on the keypad to exit.

If pair successfully, there will be one beep from both the controller and the keypad, ; if not, there will be three short beeps, then please repeat the setting.

- To pair the wireless button and the controller:

Mini Controller: Remove the back cover, and press the button "Pair"

Wireless Button: Remove the back cover, and press the button "Pair", after hearing one beep, press "Pair" again to exit pairing mode

If pair successfully, there will be one beep from both the controller and the exit button; if not, there will be three short beeps, then please repeat the setting.

- To pair the wireless keypad with multiple mini controller:

Wireless Keypad: * Master Code # 8 0 #

Mini Controller: Remove the back cover, and press the button "Pair" (Same settings for multiple controllers)

If pair successfully, there will be one beep from both the controller and the keypad, press * on the keypad to exit pairing mode; if not, there will be three short beeps, then please repeat the setting. Users need to finish the pairing within 30s for multiple controllers, or else, the keypad will exit pairing mode automatically.

- To pair the wireless button with multiple mini controller:

Wireless Button: Remove the back cover, and press the button "Pair"

Mini Controller: Remove the back cover, and press the button "Pair" (Same settings for multiple controllers)

If pair successfully, there will be one beep from both the controller and the button, press the button "Pair" on the button to exit pairing mode; if not, there will be three short beeps, then please repeat the setting. Users need to finish the pairing within 30s for multiple controllers, or else, the keypad will exit pairing mode automatically.

Low Battery Reminding

If low battery of the wireless keypad, there will be 3 beeps when every key is pressed, and the LED will be in YELLOW;

If low battery of the wireless button, the LED will shine in RED & GREEN twice alternately;

then please replace the batteries for the keypad and the button within one week.