




Installation of Magnetic Lock

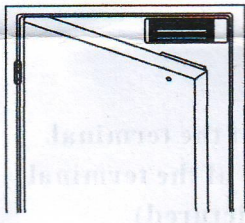


Steps →

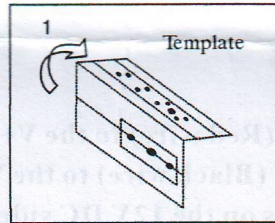


1 Flod the template to 90°

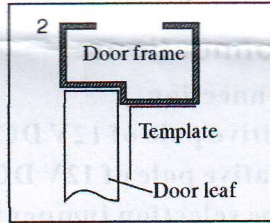


2 Close the door, place the template on door frame, close to door leaf.

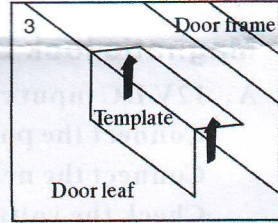

3 Mark screw positions on door leaf and door frame.

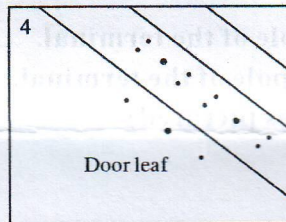

4 Drill holes on the marked positions

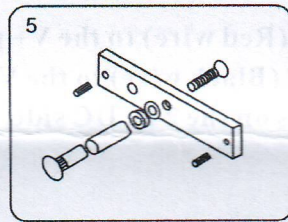


5 Install the Armature Plate on door leaf

Hollow Matel Door


Wooden Door

Matel Surface Door




Follow the instructions come with the lock


Steps →

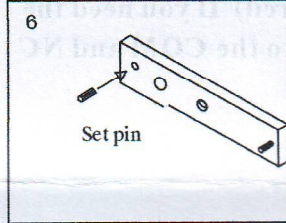


6 Put the pin into the Armature

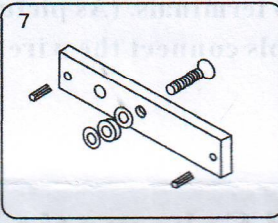


7 according to the picture add the washers on the Armature.

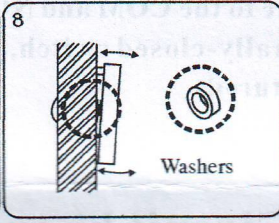


8 Place Washers between Armature Plate and Door Leaf

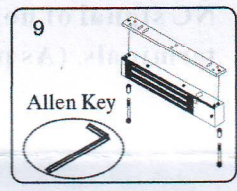


9 Use Allen Key to remove the Mounting Plate from lock body

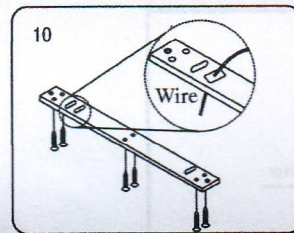


10 Wire go through the wire hole, then screw the mounting plate on top of the door frame

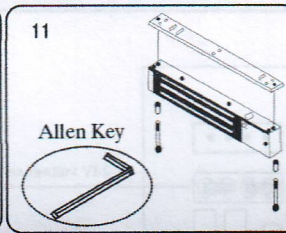

11 Use Allen Key to screw the lock body on the mounting plate

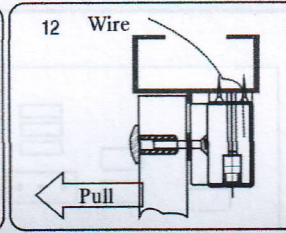


12 Close and pull the door to test holding force. Extra washers can be added to adjust angle between door leaf and Armature plate.

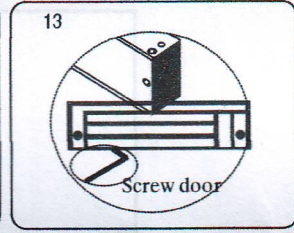


13 Confim the holding Fovg and tighten the proof Screws.

Installation of Brackets


Different Brackets can be use on different type and swing direction of door leaf.

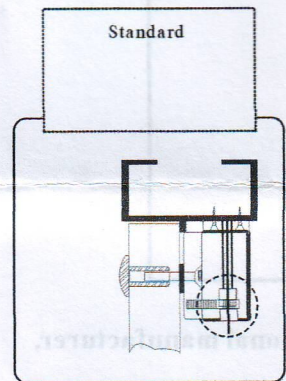


(No Bracket)

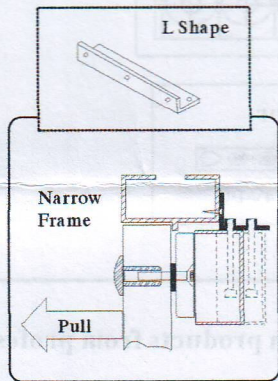

Narrow door frame (Swing Out)

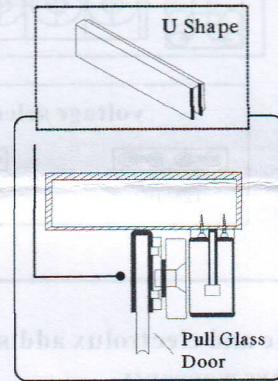

Pull Glass Door Leaf (Swing Out)

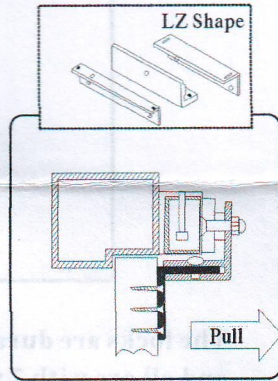

Swing In Installation